

Dramm Hydra Spraytrax Electric Rewind Version Supplement


Your Dramm Hydra Spraytrax is equipped with an electric start for the Honda 5.5HP engine as well as a motorized rewind on the hose reel. This rewind is variable speed to allow for a controlled rate of rewind. This rewind works only when the button is depressed, preventing the rewind option from being used while unattended.



WARNING

The rewind motor is attached to the reel by a chain drive.
Keep hands and items free of this drive while in motion.

The Honda electric start option is covered in the Honda engine manual that accompanies this sprayer. For questions regarding the operation or repair of the electric start, please refer to this manual.

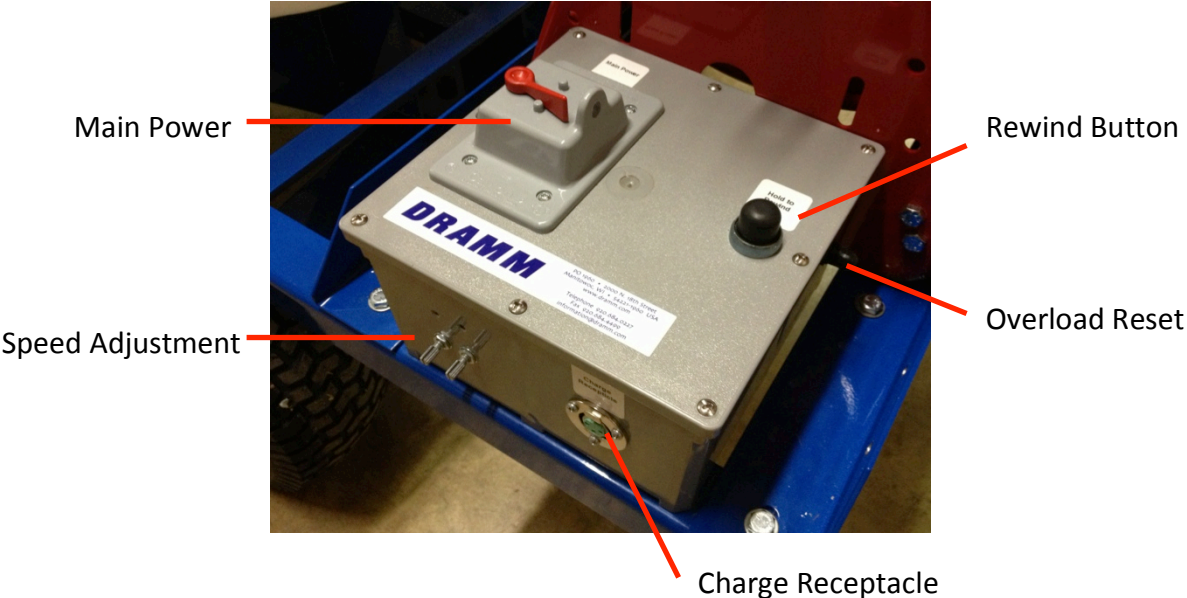

To unwind hose:

1. Ensure the power to the motor is turned **OFF**.
2. Pull hose freely. Hose will unwind easily.

NOTE: if hose is difficult to unwind, ensure that the power is turned OFF. Leaving the power on turns the motor in reverse, charging the batteries and keeping torque on the motor.

To wind the hose:

1. Turn power **ON**.
2. Remove the gun from the hose to prevent damage or catching as it rewinds.
3. Make sure the hose is free from all impediments.
4. Depress the **REWIND** button on the control box. The hose will only wind while actively depressing this button.
5. Adjust the speed of rewind to a desired safe speed using the variable speed knob on the side of the control box.
6. Guide the hose onto the reel to prevent birdnesting.
7. If the hose catches while winding, release the **REWIND** button.
8. If the hose catches and the motor remains engaged, the overload will trip requiring the **RESET** button to be pressed.
9. Rewind until the hose donut reaches the guides on top of the reel.
10. Turn power **OFF** to prevent the battery from draining when not in use.

Your Hydra Spraytrax with electric start is equipped with an alternator to charge the batteries during operation. However, the batteries may not charge fully when the unit is used for short periods of time or the reel is rewound often. You may charge the batteries with the included 120v charger when not in use.

To charge the batteries:

1. Connect the charger to the control box and plug the charger into a 120v outlet.
2. The main power switch should be in the OFF position.
3. When requiring a charge the light on the charger will be red. It will remain red while charging. The light will be green when charging is completed.

For any questions relating to your Damm Hydra Spraytrax, please contact Damm at:

Damm Corporation
P.O. BOX 1960 2000 N. 18th Street
Manitowoc, WI 54220
920/684.0227
www.damm.com
information@damm.com